




Bohrschablone Art. Nr. 700.312 Rückenpolster Gobi Topcase

Drilling pattern No. 700.312 Back rest Gobi Top case

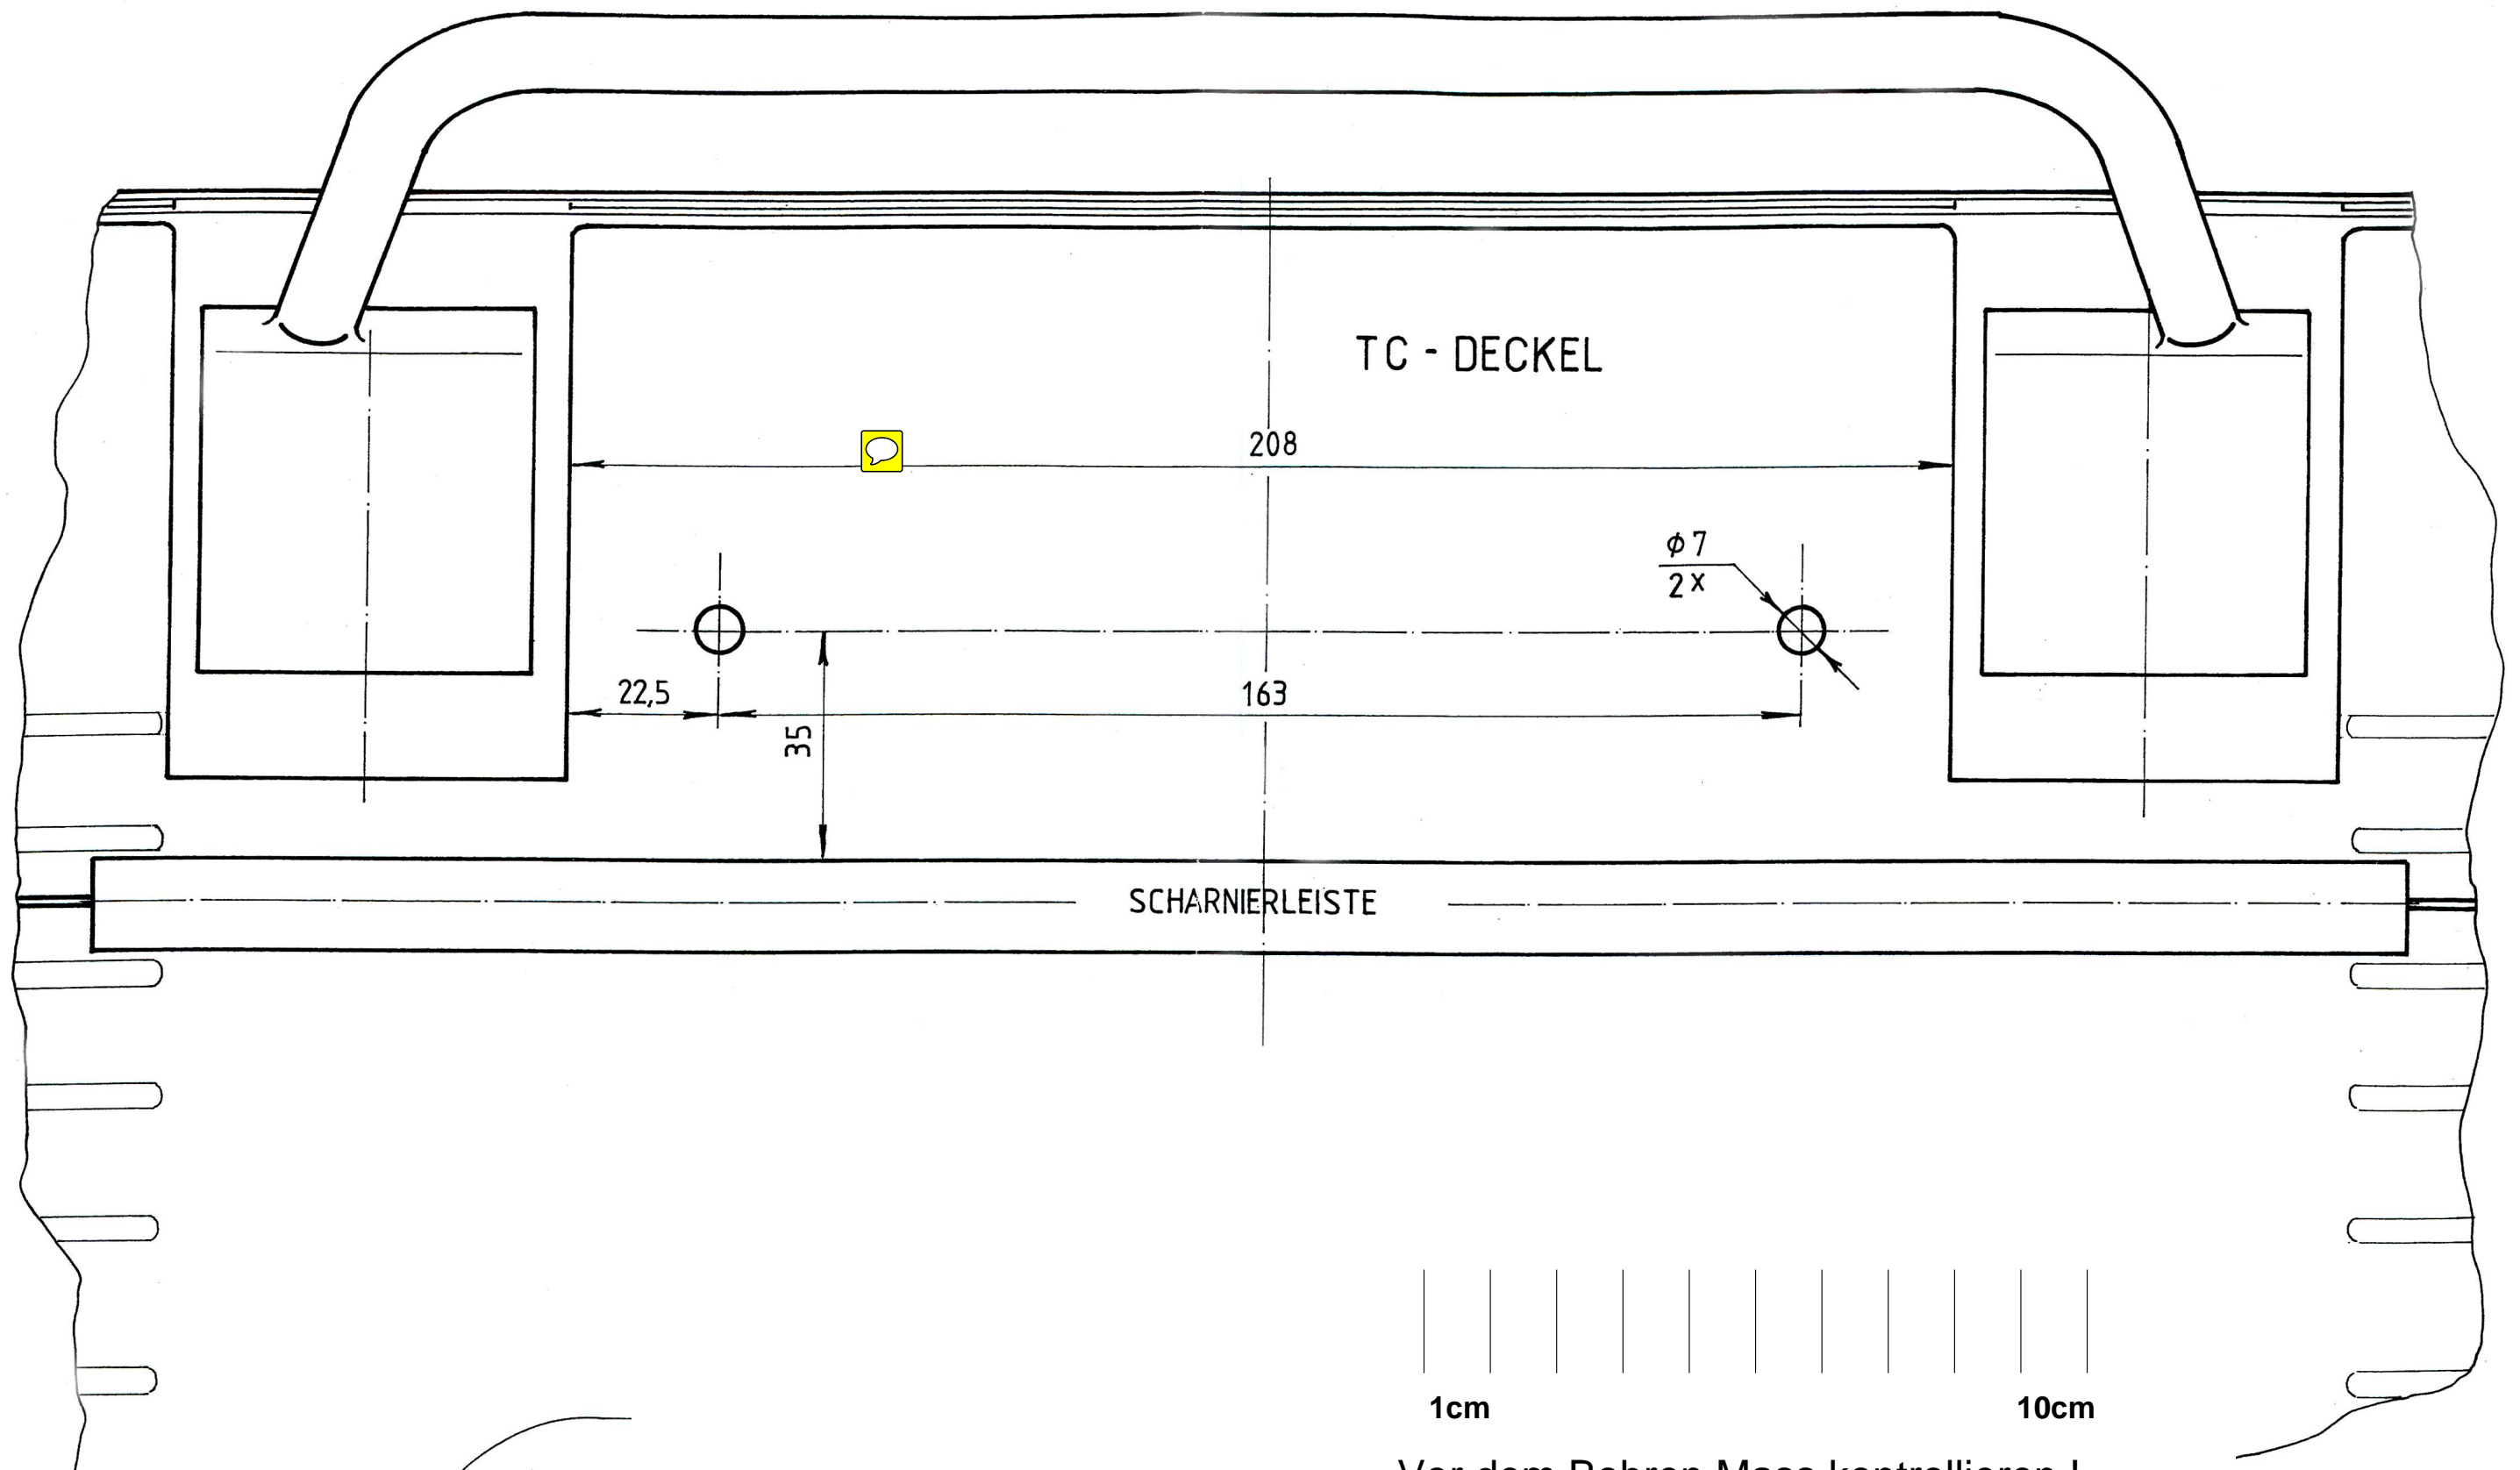

Vor dem Bohren Mass kontrollieren !
Control dimension before drilling !