

Frontschutzbügel

SUZUKI GSF 650 Bandit ABS
ab Bj.2010 (schwarze Soziusfußrasten)

Art.Nr.:503.3513 00 01 schwarz

Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Quad-Parts
Accessoires



Montageanleitung

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700007737	Frontschutzbügel
4	150.786	Inbusschraube M8 x 40
2	150.787	Inbusschraube M8 x 45
6	150.810	U-Scheiben ø 8,4 mm
2	151.143	Alu-Distanz ø 13 x ø 9 x 12 mm
4	151.049	Alu-Distanz ø 15 x ø 9 x 7 mm

Tipp:
Schrauben sie alle Teile an und lassen sie die zugänglichen Schrauben etwas locker. Nachdem alles montiert ist, werden alle Schrauben auf das entsprechende Anzugsmoment angezogen.



Frontschutzbügel

SUZUKI GSF 650 Bandit ABS
ab Bj.2010 (schwarze Soziusfußrasten)

Art.Nr.:503.3513 00 01 schwarz


Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Quad-Parts
Accessoires



Montage

① Befestigung des Frontschutzbügels oben links und rechts:

am Klemmteil der Gabelbrücke.
Originalschraube entfällt.
Zuerst die Aludistanz $\varnothing 13 \times \varnothing 9 \times 12$ mm
außen ins Klemmteil einlegen und den
Fahrschutzbügel mit den Inbusschrauben M8
x 45 sowie U-Scheibe $\varnothing 8,4$ verschrauben.



2x




2x

2x

② Befestigung des Frontschutzbügel unten links und rechts:

am unteren Klemmteil der Gabelbrücke.
Den Frontschutzbügel an den frei gemachten
Bohrungen mit den Inbusschrauben M8 x 40
sowie U-Scheibe $\varnothing 8,4$ verschrauben.
Zwischen den Bügel und die Gabelbrücke
die Aludistanzen $\varnothing 15 \times \varnothing 9 \times 7$ mm einsetzen.




4x



4x

4x

Vor der endgültigen Verschraubung die Position
der Standrohre in der Gabelbrücke kontrollieren
und, wenn nötig, Originalposition wieder
herstellen.

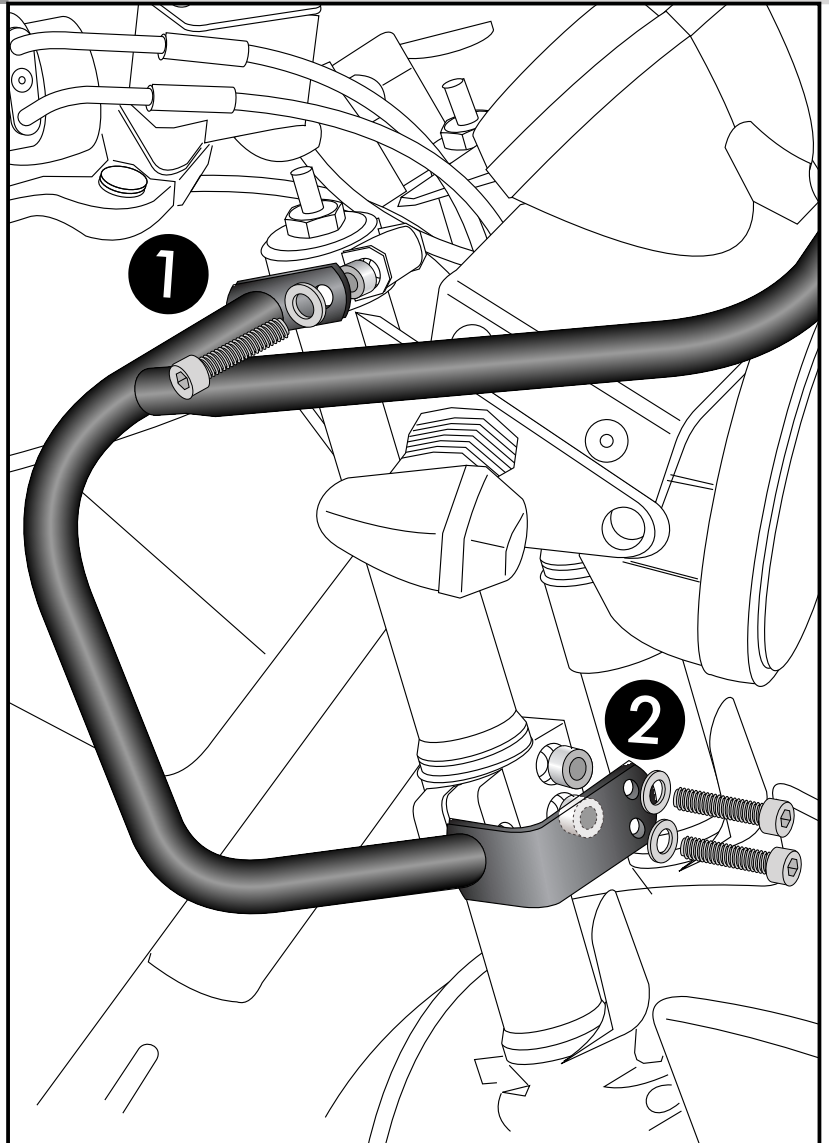

Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigefügten Serviceinformationen.

Als weiteres Zubehör lieferbar:
504.3512 00 01 Heckschutzbügel
501.325 00 01 Motorschutzbügel



Hepco & Becker GmbH
An der Steinmauer 6

D-66955 Pirmasens

Tel.: 06331 - 1453 - 100
Fax: 06331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Front protection bar for driving schools

SUZUKI GSF 650 Bandit ABS
from date of manufacture 2010
(black footrest bracket)

Item - No.: 503.3513 00 01 black

Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Quad parts
Accessories



Assembling instructions

The kit includes the following parts:

Quant item no. description

1	700007737	Front protection bar
4	150.786	allen screw M8 x 40
2	150.787	allen screw M8 x 45
6	150.810	washer \varnothing 8,4 mm
2	151.143	spacer \varnothing 13 x \varnothing 9 x 12 mm
4	151.049	spacer \varnothing 15 x \varnothing 9 x 7 mm

Tip:

Fit all parts and screw on not too strong.
After mounting all parts, the screws should be
tightened to the torque specified.



Front protection bar
for driving schools

SUZUKI GSF 650 Bandit ABS
from date of manufacture 2010
(black footrest bracket)

Item - No.: 503.3513 00 01 black


Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Quad parts
Accessories



Assembling instructions


① Fastening of crash bar top left + right:

at the top fork bridge screw connection.
Original screws are not used any longer.
Sandwich spacer $\varnothing 13 \times \varnothing 9 \times 12$ mm and fix
the bar with allen screws M8 x 45 and washers
 $\varnothing 8,4$.




② Fastening of crash bar bottom left + right:

at the lower fork bridge screw connection.
Fix the bar at the free borings with allen
screws M8 x 40 and washers $\varnothing 8,4$.
Sandwich spacer $\varnothing 15 \times \varnothing 9 \times 17$ mm



Before tightening the screws you should control
the position of the fork tubes in the fork bridge.
If necessary, restore them to its former
position.

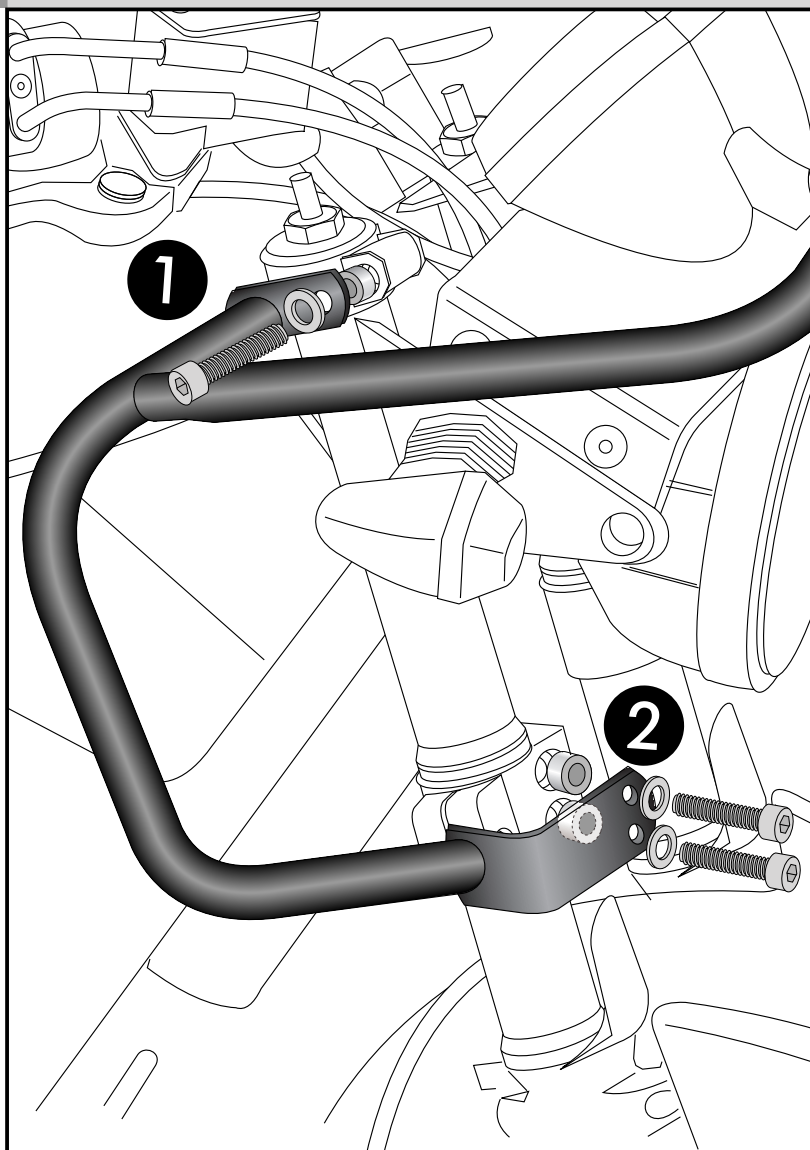

Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.

Also available:
504.3512 00 01 Rear protection
501.325 00 01 Engine guard



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Germany

Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de