

Gepäckbrücke

PEUGEOT Speedfight 3

Artikel-Nr.:
650.842 01 01 schwarz

Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Accessoires



Montage

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700008049	Gepäckbrückenplatte
2	151.023	Senkinbusschrauben M6x45
1	151.102	Senkinbusschrauben M6x25
3	150.809	U-Scheiben Ø6,4
3	150.799	selbstsichernde Muttern M6
1	150.882	Aludistanz Ø18xØ9x10mm
2	150.815	Aludistanz Ø18xØ9x30mm

Die Gepäckplatte ist für die Montage von Topcases mit Palette vorgesehen.

Hier stehen die Produkte aus der Journey Serie zur Auswahl:

Topcase	Artikel-Nr.	Inhalt, Farbe
Journey TC 30	610.206	32l schwarz
Journey TC 40	610.089 0001	38l schwarz
Journey TC 40	610.089 0009	38l schwarz, Blende silber
Journey TC 50	610.087 0001	48l schwarz
Journey TC 50	610.087 0009	48l schwarz, Blende silber



Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigefügten Serviceinformationen.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: 06331 - 1453 - 100
Fax: 06331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Tip:
Ziehen sie alle zugänglichen Schrauben
zuerst nur locker an. Nachdem alles montiert
ist, werden die Schrauben dann auf das
entsprechende Anzugsmoment festgezogen.
Dadurch wird sichergestellt, dass das
Produkt spannungsfrei angebaut ist.

Gepäckbrücke

PEUGEOT Speedfight 3

Artikel-Nr.:
650.842 01 01 schwarz

Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Accessoires




Montage

Vorbereitung:

Spoiler am Heck demontieren (entfällt)
In die nun freien Bohrungen Distanzen einsetzen.

Vorne ①

die Aludistanzen $\varnothing 18 \times \varnothing 9 \times 30 \text{mm}$




Hinten ②

die Aludistanz $\varnothing 18 \times \varnothing 9 \times 10 \text{mm}$



1

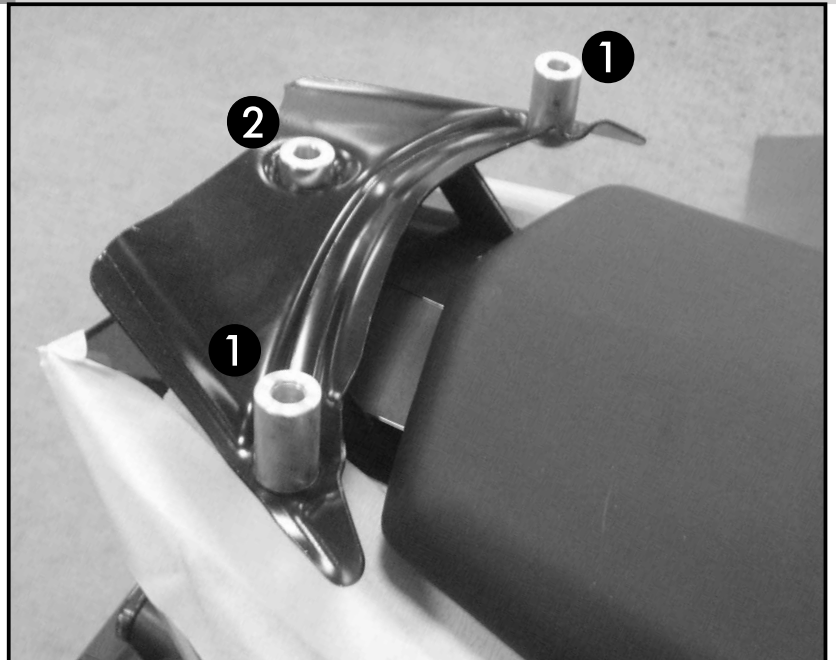


Montage der Gepäckplatte:

Die Gepäckplatte auf die Distanzen setzen.

Vorne ①

mit den Senkschrauben M6 x 45

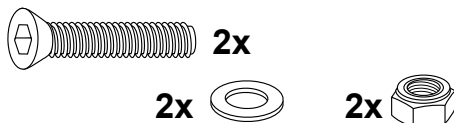

Von unten die U-Scheiben $\varnothing 6,4$ sowie selbstsichernde Muttern M6 verwenden.


Hinten ②

mit der Senkscheibe M6x25 verschrauben.

Von unten die U-Scheiben $\varnothing 6,4$ sowie selbstsichernde Muttern M6 verwenden.



2

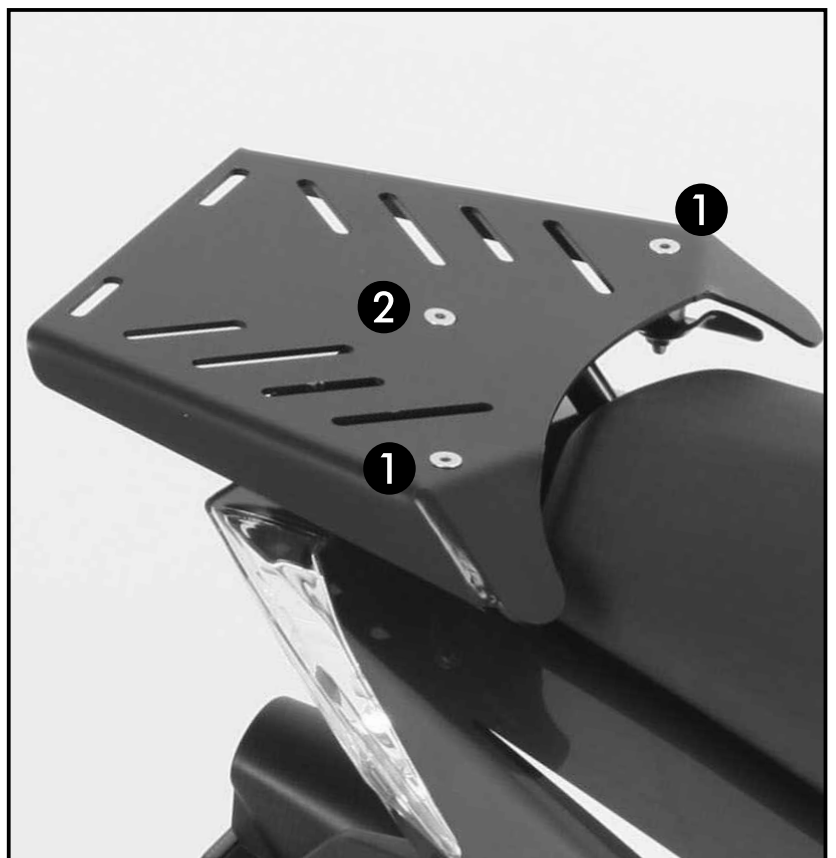

Gepäckbrücke

PEUGEOT Speedfight 3

Artikel-Nr.:
650.842 01 01 schwarz

Seitenkoffer
Topcases
Gepäckträger
Lock it System
Softbags
Aluminiumkoffer
Lederkoffer
Schutzbügel
Hauptständer
Chopper-Parts
Accessoires



Montage

Beispiel für die Montage der
Universalpalette auf der Gepäckplatte
(im Lieferumfang des Topcases)



unteres Bild:
Beispiel mit montiertem Journey TC 40
Journey TC 40 Artikel-Nr. 610.089 0009
schwarz, Blende silber



Luggage plate

PEUGEOT Speedfight 3

Item-No.:
650.842 01 01 black

Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Accessories



Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700008049	luggage plate
2	151.023	countersunk screw M6x45
1	151.102	countersunk screw M6x25
3	150.809	washer Ø6,4
3	150.799	self lock nut M6
1	150.882	alu spacer Ø18xØ9x10mm
2	150.815	alu spacer Ø18xØ9x30mm

This luggage plate is for mounting top cases provided with a pallet.

We offer the products from the Journey series to choose from:

Top case	Item-No.	capacity, colour
Journey TC 30	610.206	32l black
Journey TC 40	610.089 0001	38l black
Journey TC 40	610.089 0009	38l black, Cover silver
Journey TC 50	610.087 0001	48l black
Journey TC 50	610.087 0009	48l black, Cover silver



Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de

Tip:

Fit all parts and screw on not too strong.
After mounting all parts, the screws should be tightened to the torque specified. This guarantees, that the kit is mounted without tension.

Luggage plate

PEUGEOT Speedfight 3

Item-No.:
650.842 01 01 black

Side cases

Top cases

luggage frames

Lock it system

Softbags

Aluminium luggage

Leather luggage

Protection bars

Center stands

Chopper parts

Accessories




Assembling instructions

Preparing:

Remove the rear spoiler - it is obsolete.
put spacer in the free borings.

Front: ①

alu spacer $\varnothing 18 \times \varnothing 9 \times 30 \text{mm}$




Rear: ②

alu spacer $\varnothing 18 \times \varnothing 9 \times 10 \text{mm}$




1

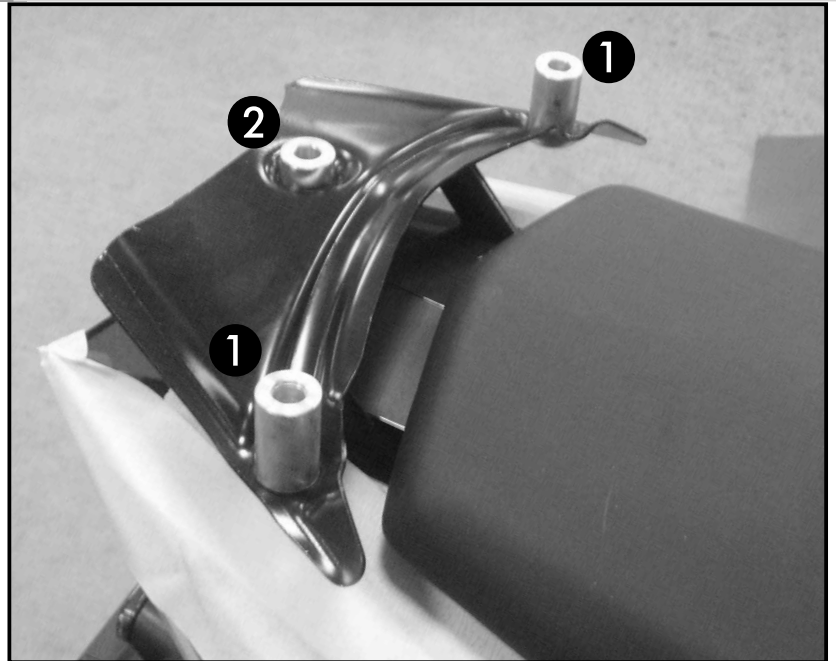

Fastening of the luggage plate:
over the spacers.

Front: ①

with countersunk screw M6 x 45

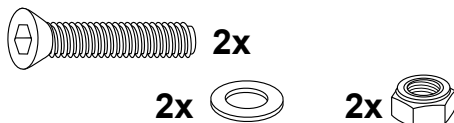

Secure with washers $\varnothing 6,4$ and self lock
nuts M6 from below.


Rear: ②

with countersunk screw M6x25

Secure with washers $\varnothing 6,4$ and self lock
nuts M6 from below.



2

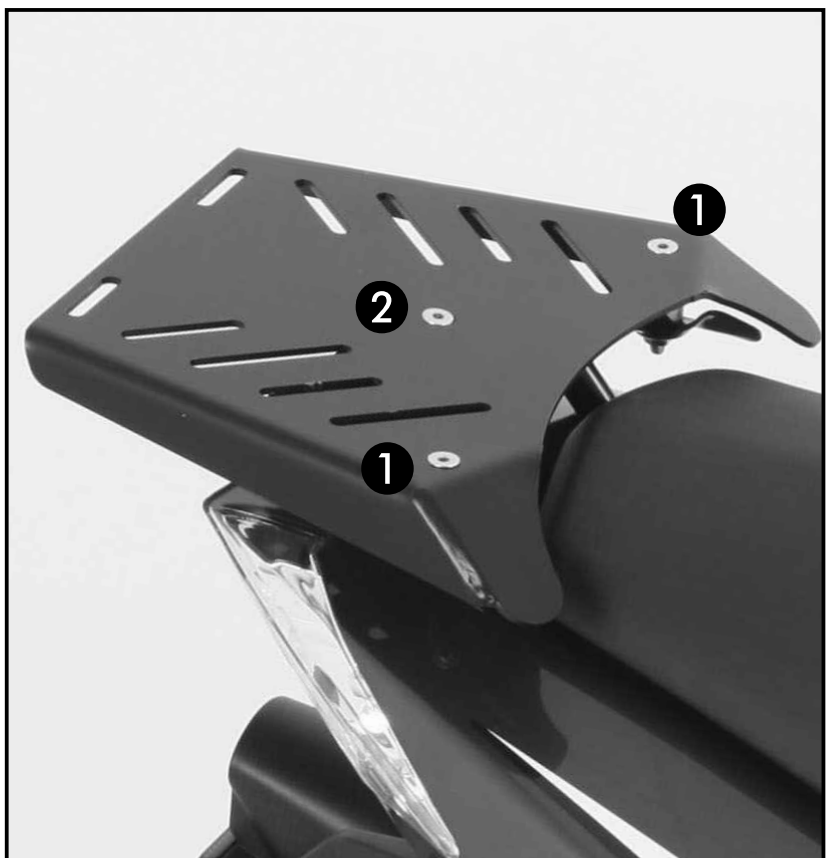

Luggage plate

PEUGEOT Speedfight 3

Item-No.:
650.842 01 01 black

Assembling instructions

Example for the assembly of the pallet on
the universal luggage plate
(Supplied with the top case)

Bottom image:
Example with mounted Journey TC 40
Journey TC 40 Item no. 610.089 0009
black, silver cover

Side cases
Top cases
luggage frames
Lock it system
Softbags
Aluminium luggage
Leather luggage
Protection bars
Center stands
Chopper parts
Accessories

